

NECONO DIGITAL CAMERA

Important! Read before using for the first time.

(1) Not packaged with a micro SD card.

This camera requires a microSD card or microSDHC card (up to 16G). Please prepare one to operate. The microSD card is to be used only for this camera.

※If you use a card with data from other digital cameras and/or cell-phones on this camera, data may be lost or destroyed.

※Refer to manual p.19 and p.36 for further information.

(2) Charge!


Before using the camera for the first time, please fully charge the battery. The charging should take about an hour and a half.

※Refer to manual p.22.

(3) Insert the microSD card in the right direction!

Inserting the card in the wrong direction may cause damage to your camera.

※Refer to manual p.23.

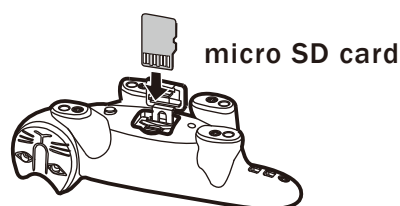

(4) An external monitor enables the below settings!

Use the video out cable to connect to a TV with a component video input connector or dedicated video monitor (scheduled to be released in May or June) and enable extra settings.

1. Resolution <Hi 2048×1536 / Lo 1024×762> (Still Capture)
2. Black&White <On / Off>
3. Silent Recording <On / Off> (Movie Mode)
4. Card Format
5. Delete

※Refer to manual p.31 and p.34

(5) Use a strap!

To avoid the camera from falling, we recommend you to use a strap. The strap is not included. We are scheduled to produce dedicated cases, straps and accessories soon. Pouch is already on sale.

(6) 6.Maximum numbers of photos / video) (with 2GB MicroSD card)

Still Capture mode :	1000 ~ max 2500 (approximately)
Video mode :	35 min (approximately)

※Depends on the environment and subject.

※Please go to www.superheadz.com/necono for more information.

